

## DODGE RAM DUAL REAR FLAT MUD GUARD

### INSTALLATION INSTRUCTIONS

*Please read instructions thoroughly before installation.*

#### Tools Required

- Short Phillips screwdriver
- Center punch
- Drill / 1/8" drill bit

#### Package Contents

- Driver & passenger side rear mud guard
- #10 screw (qty. 12)
- Washers (qty. 12)
- U-Clip (qty. 4)
- Instruction sheet

**NOTE:** It may be necessary to remove the rear wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove existing fasteners from locations A and E (Figure 1).
3. Attach mud guard at locations A and E with #10 screw and washer, check fit and level before tightening.
4. Using mud guard as a template, mark, center punch, and drill 1/8" holes at locations B and C and attach with a #10 screw and washer (Figure 1).
5. Using mud guard as a template, mark and drill 1/8" holes at locations D and F and attach with a #10 screw and washer thru mud guard, fender liner and into a U-Clip (Figure 1).

*NOTE: The U-Clip is used as a nut and placed on the backside of the fender liner - DO NOT clip U-Clip over liner.*

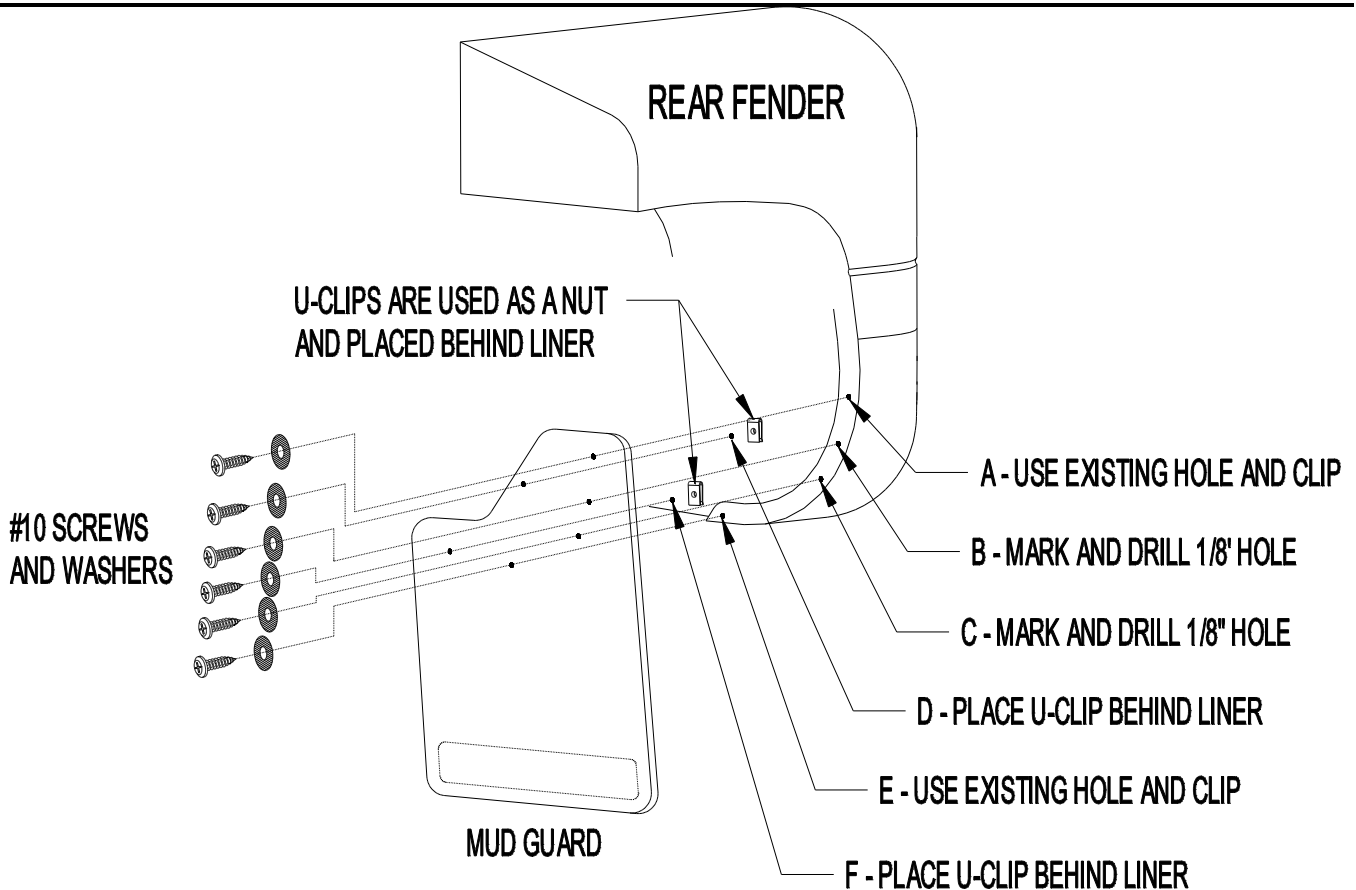


Figure 1

**NEED A LOGO FOR YOUR NEW MUD GUARD? TRY AN INTERNET SEARCH FOR "EMBLEM" ON E-BAY, AMAZON OR YOUR FAVORITE AUTOMOTIVE SITE.**