

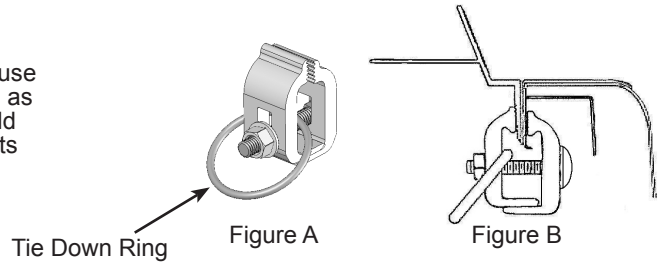


SPECIAL INSTRUCTIONS FOR LIMITED EDITION COVERS (save with owners manual)

1 ACCESS LIMITED CLAMP ASSEMBLY



Limited Edition Roll-Up covers using clamps also come with tie down rings to use as cargo ties. Before clamping rails to box, assemble tie down rings to clamps as shown in figure A. When clamp is mounted with rail to box, tie down ring should hang as shown in figure B. (clamps and tie down rings are not included with kits that require bolt-on installation)

NOTE: MAXIMUM LOAD FOR EACH TIE DOWN RING IS 80 lbs. DO NOT EXCEED 80 lbs AT ANY SINGLE POINT, DISTRIBUTE LOAD EVENLY AMONG ALL TIE DOWNS.



2 ACCESS LIMITED TRAILSEAL INSTALLATION

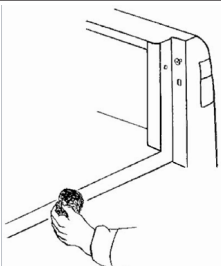

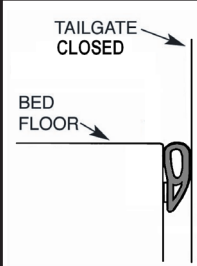
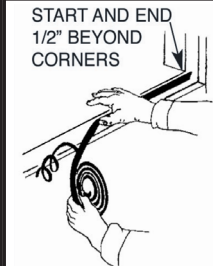
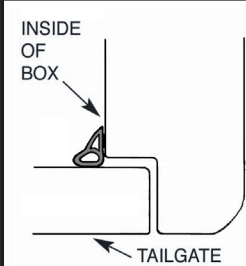
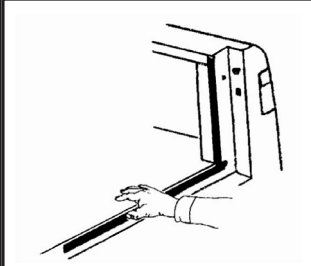
SUPPLIES/TOOLS NEEDED

 <p>Mild soapy water and clean rags.</p>	 <p>Scissor</p>
---	--

IMPORTANT — READ BEFORE INSTALLING

The following instructions apply for most truck boxes. Due to a variety of box designs, your installation may differ from these shown. Cut a 1" test piece to experiment in selecting the most suitable seal location for your truck.

INSTRUCTIONS

	 <p>APPROX. 1/4" BELOW BED FLOOR</p>	 <p>TAILGATE CLOSED BED FLOOR</p>	 <p>START AND END 1/2" BEYOND CORNERS</p>	 <p>INSIDE OF BOX TAILGATE</p>	
<p>1) Clean surface with soapy water and dry. Wipe with alcohol pad included in kit. Avoid touching cleaned surface during installation.</p>	<p>2) Cut test piece 1" long. Apply it approximately 1/4" below floor bed.</p>	<p>3) Close tailgate and check for adequate seal. If needed adjust position of test piece accordingly.</p>	<p>4) Remove test piece and apply seal to selected location in straight line continuous from side to side. Start 1/2" beyond wall/corner and stop 1/2" beyond wall/corner at other end.</p>	<p>5) Use same 1" test piece to experiment with best location up inside of box. Close tailgate. It should compress seal approx. 1/4 to 3/8 inch. Apply seal from floor up to top of box as shown. Check seal compression. If needed make adjustment now. Repeat on other side.</p>	<p>6) Apply continuous pressure along entire seal to ensure maximum adhesion. TIP: Lubricate bottom of tailgate with soap water. Close tailgate. Leave it for several days. This forces the seal to take the tailgates shape for a better seal.</p>