


WeatherTech®

Tailgate TechLiner™ Installation Instructions

Thank you for purchasing your WeatherTech® Tailgate TechLiner™. The Tailgate TechLiner™ will offer incredible, affordable protection and years of reliable use if you follow these simple instructions.

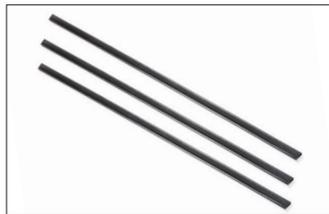

Parts Kit # 88TG03
(3) Extrusions



Tools required
1/4" Drive Socket Set or
1/4" Wrench



1 Lower the tailgate and remove all tailgate accessories prior to installation. Clean your truck bed and tailgate with soap and water or TechCare™ Gentle Car™ Shampoo and dry thoroughly before installing the Tailgate TechLiner™.



2 Place Tailgate TechLiner™ on a dry, flat surface*. Unfold and lay out to allow liner to flatten. (For faster results, lay liner in the sun and put a small weight on each of the corners.)

**Take note of the location of the Velcro® pads on the bottom of the Tailgate TechLiner™, and prevent pads from becoming dirty or collecting debris. Do not remove the adhesive backing at this time.*



3 Use a socket or wrench to remove the center bolt and washer from the tailgate as shown. Retain this because you will use it again in a later step.



4 Remove the three plastic extrusions from the parts bag. Place the first extrusion against the edge with the opening facing the front of the vehicle. Slowly remove the adhesive backing, pressing firmly as you go.

[View Easy Installation Video](#)

WeatherTech.com/install

Questions? Call customer service at 800 441 6287
Monday - Friday: 9 a.m. to 5 p.m. Central Time



67TG03
© 2012 by MacNeil IP LLC

MacNeil
AUTOMOTIVE
PRODUCTS LIMITED

Specialists in Original Equipment and
Aftermarket Automotive Accessories
1 MacNeil Court • Bolingbrook, IL 60440
800-441-6287 • 630-769-1500 • fax 630-769-0300

WeatherTech.com

WeatherTech®

Tailgate TechLiner™ Installation Instructions

Tailgate TechLiner™ Installation Instructions



5 Lay the Tailgate TechLiner™, Velcro® pads facing down, onto the tailgate making certain the features align.



6 Once the Tailgate Techliner™ is in place, take the bolt and washer that you previously removed and re-install them over the Tailgate Techliner™. DO NOT OVER TIGHTEN.



7 Bend the Tailgate TechLiner™ backward to locate the first Velcro® disc without shifting the position of the Tailgate TechLiner™. Remove the backing from the Velcro® disc and fold the tailgate TechLiner™ back into place. Press down firmly on the location of the Velcro® disc. Continue the process in a clockwise direction.



8 Starting at one end, begin tucking the edge of the Tailgate Techliner™ into the plastic extrusion that you previously installed. Work your way down the entire length of the tailgate.

WARNING!

NOTE: It is imperative to adhere the Tailgate TechLiner™ to the tailgate of the truck as described above. Failure to do so may allow the Tailgate TechLiner™ to lift during travel as a result of turbulent airflow, which could result in unsafe conditions for the operator of the vehicle or other vehicles nearby.

Clean your Tailgate TechLiner™ using mild soap and water, or use our TechCare™ FloorLiner™ & FloorMat Cleaner and Protector for best results.



Proudly Designed,
Engineered and
Manufactured
in the USA

67TG03
© 2012 by MacNeil IP LLC

[View Easy Installation Video](#)

WeatherTech.com/install

Questions? Call customer service at 800 441 6287
Monday - Friday: 9 a.m. to 5 p.m. Central Time

MacNeil
AUTOMOTIVE
PRODUCTS LIMITED

Specialists in Original Equipment and
Aftermarket Automotive Accessories
1 MacNeil Court • Bolingbrook, IL 60440
800-441-6287 • 630-769-1500 • fax 630-769-0300

WeatherTech.com