

BOSS Grille Installation Instructions:

Congratulations on your purchase of a high quality PUTCO product.
Should you need any application or technical assistance feel free to call us at:
1-800-247-3974
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.

Please read all instructions before beginning installation and be sure to check to see that all parts and hardware are included.

Parts List		
Description	Parts	Quantity
BOSS Grille	Supplied in Kit	1
1/4" x 20 Cap Head Allen	Supplied in Kit	8
1/4" x 20 Nylock Nut	Supplied in Kit	8
1/4" Washer	Supplied in Kit	16
Top Close-Out Panel	Supplied in Kit	2
Lower Mounting Bracket	Supplied in Kit	1
Grille Fastener	Supplied in Kit	4

Tools Required			
10mm, 7/16" Socket and Ratchet	Pliers	Allen Wrench	Small Flat Blade Screwdriver
Drill	5/16" Drill Bit	Dremel or Side Cutter	Marker

NOTE: IT IS RECOMMENDED THE INSTALLER/TECHNICIAN READ THE INSTRUCTIONS THOROUGHLY PRIOR TO INSTALLATION OF THIS PRODUCT.

1. Open hood.
2. Remove ten push pins from the hood shroud and set aside for re-installation.
3. Remove four 10mm bolts from the top of the grille and set aside for re-installation.
4. Carefully unclip the six retainer clips that are behind the grille near the radiator.


CAUTION: Take the proper precautions to protect the face of the grille from cosmetic damage.

5. Reposition the factory grille away from the vehicle and place on a clean non-abrasive workbench.

6. Assemble the *Lower Mounting Bracket* to the *BOSS Grille* brackets using the supplied hardware. (Fig-1)

7. Position and align the *BOSS Grille* inside the factory opening. Confirm that the grille is centered and aligned before attaching.
(Note: Re-adjust the lower bracket if the grille is not centered.)

8. Remove the *BOSS GRILLE* from the vehicle and attach the supplied *Grille Fasteners* to the *Lower Mounting Bracket*.

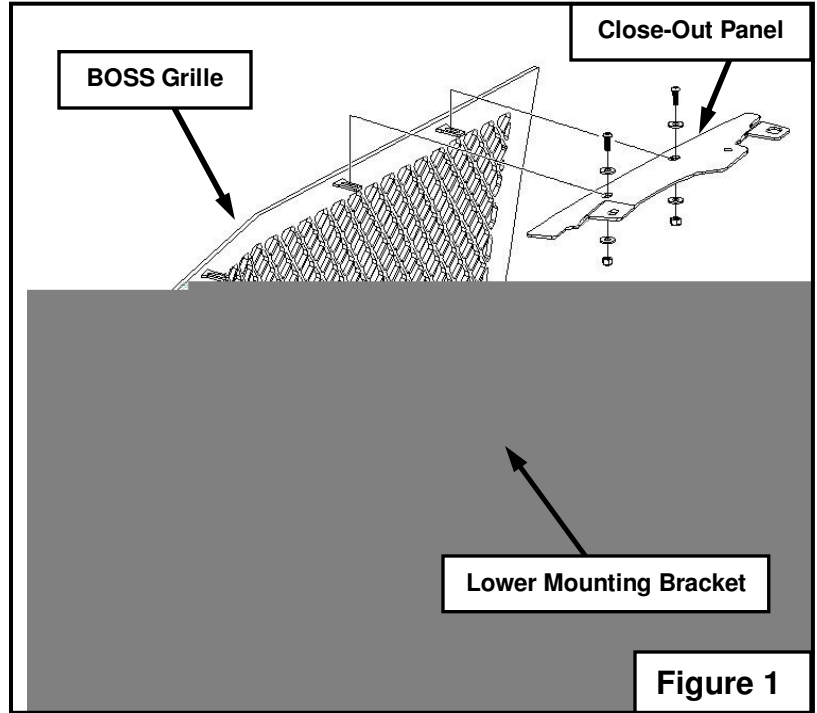

9. Attach the two *Close-Out Panels* to the top of the grille using the supplied hardware. (Passenger Side Shown Fig-1)
(Note: There is a left and right hand side. Leave hardware loose.)

10. Position and align the *BOSS Grille* inside the factory opening. Secure the *BOSS GRILLE* to the vehicle by engaging the four lower *Grille Fasteners*.

11. Attach the *Close-Out Panels* to the vehicle using the four 10mm bolts that were removed in Step-3. Verify that the grille is centered and aligned before tightening hardware.
(Note: Verify that the *Factory Shroud* holes line up with the *Close-Out Panels*. Adjustment of the *Close-Out Panels* may be needed.)

12. Tighten all hardware so the grille is secure.

13. Re-attach the hood shroud cover that was removed in Step-2.

14. Close hood and confirm that all components and hardware are tight and secure.

IS-270506B-Mar13

LIMITED WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. Black products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.