

# **LED Hidden Strobe Lights USER MANUAL**

LIGHTHEAD x 2pcs

FLASHER & CABLE


#### CONTENTS





#### LIGHT ASSEMBLY INSTALLATION

- 1. Remove the Corner/Head/Tail light from vehicle.
- 2. Select location to mount lighthead.
- 3. Drill 1 inch diameter hole to the light assembly.
- 4. Insert lighthead into hole.
- 5. Apply silicone (user-supplied) for better fit.

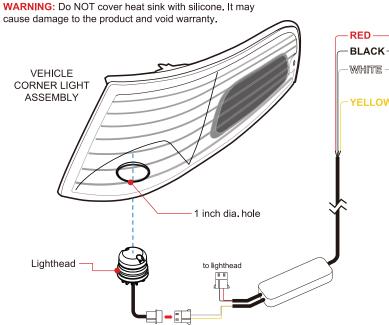

NOTE: Lighthead mounting location may vary depending on the design of the vehicle light assembly.

RED — To +VDC (fuse @ 5A)

**BLACK** — To Chassis Ground

For Simultaneous or Alternating Flash

\*refer to "WIRING 2 KITS TOGETHER" on opposite page

YELLOW - For Synchronization & Flash Patterns

Connect YELLOW wires of all Kits together for synchronization \*All kits must be set at the same pattern

Momentarily apply +VDC to YELLOW wire:

once for next pattern

quickly three times for reset

FP#	Flash Patterns		
0	Random	10	Double (all)
1	Single (split)	11	Quad (all)
2	Double (split)	12	Quint (all)
3	Quad (split)	13	Mega (all)
4	Quint (split)	14	Ultra (all)
5	Mega (split)	15	Single-Quad (all)
6	Ultra (split)	16	Single H/L (all)
7	Single-Quad (split)	17	Steady 2 (CA)
8	Single H/L (split)	18	Steady 4 (all)
9	Single (all)		


\*SPLIT = Head1 alternate Head2

\*ALL = Head1 & 2 Simultaneous

NOTE: This unit is factory set at FP12

## WIRING TO EXISTING STROBE CABLES

In this configuration, existing strobe extension cables are used to facilitate installation.

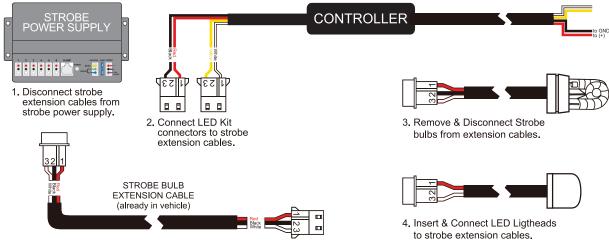

NOTE: Wire colors of LED Kit do not need to match wire colors of extension cables.

WARNING: Do not connect LED lighthead directly strobe

power supply. It will cause damage and void the warranty.



## **LED Hidden Strobe Lights USER MANUAL**


× 2pcs FLASHER & CABLE






### FLANGE MOUNT INSTALLATION (for kits with Flange option only)


1. Remove Original Base Plate from lighthead base.

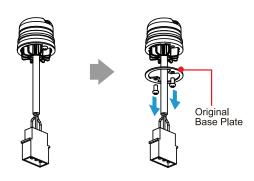

2. Secure Flange Plate to lighthead base with screws.

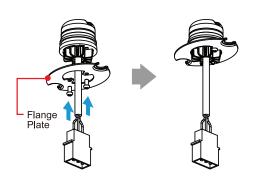

- 3. Use mounting flange to mark wire and screws holes to drill.
- 4. Drill marked holes accordingly.
- 5. Insert lighthead pigtail into wire hole.
- Place gasket, lighthead, and flange inline with the mounting holes, and secure with supplied sheet metal screws to flasher.

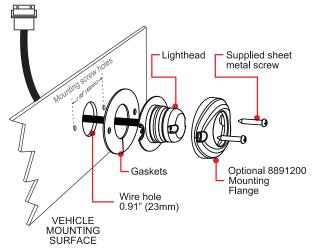

WARNING: Make sure to use the gaskets when mounting lightheads.

#### **WIRING 2 KITS TOGETHER**

In this configuration, different alternating flash patterns can be achieved.

If "split" flash pattern\* is selected: Heads 1&4 will alternate with Heads 2&3.

If "all" flash pattern\* is selected: Heads 1&2 will alternate with Heads 3&4. \*refer to Flash Patterns chart on opposite page.

**NOTE:** To have Heads 1&3 alternate with 2&4, leave all WHITE wires disconnected and select "split" flash patterns.

